



HELIX 26

***INSTALLATION AND
OPERATIONS INSTRUCTIONS***

(1) Power Supply

The power supply should be with 120V, 60Hz.
A separate power supply is recommended so as to avoid tripping while working with other electrical appliances.
The standard supply should be three-phase wiring from the back side. If you use an extended supply, it must be with a three-phase plug.



When there is water on certain electric components, you must ask professional person to check and mend.



When not in use, the plug must be taken off from the socket.




Do not cover the venting!

(2) Thermal Protector

The thermal protector will be cut off while the temperature is too high caused by covering the air venting or other reasons. You need to take the plug out till the fireplace is cooled and insert the plug again.
(If it's still not working please contact the professional serviceman.)


(3) Installation

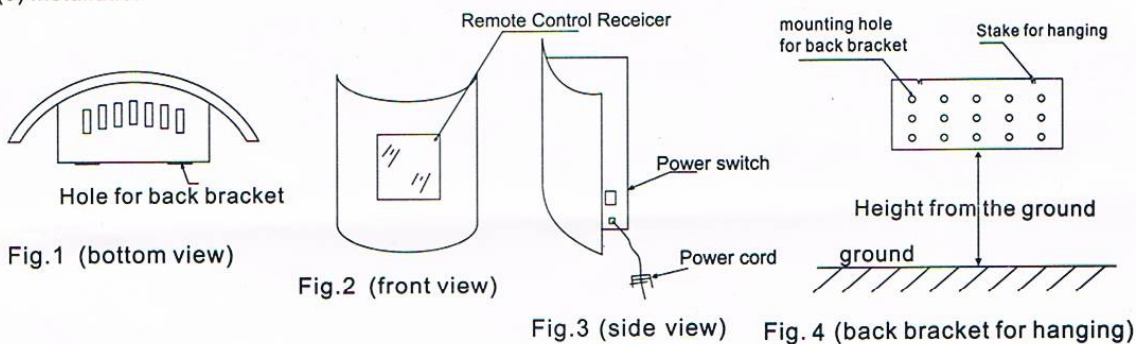

- 1 Fix the back bracket on the wall horizontally at a proper height.
- 2 Insert the stake into the mounting hole on the back side of the fireplace and then plug the power cord to use.

(4). Operation Instruction

- A. Press the switch on the right side of the appliance, when turn on the appliance, you could then use the remote or manual control to operate the machine.
- B. Use the remote directly opposite the machine, or better in a scale between -45 and +45 degrees and within 4-5 meters distance.
- C. Press "ON" to make the appliance flame effect work.
- D. Press "*" to make the first level heating work.
- E. Press "**" to make the second level heating work.
- F. Press "OFF" to make all the functions stop working.

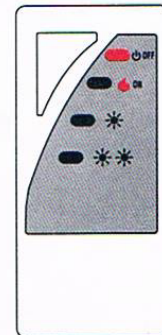

Remote controller

(5). Packing List

- A. WALL MOUNT ELECTRIC FIRE
- B. REMOTE CONTROLLER
- C. SPARE BULB
- D. USER'S MANUAL
- E. A BACK BRACKET
- F. SCREWS