

# AUTOMATIC GRILL SHUT-OFF 1-HOUR TIMER INSTRUCTIONS



**Model # 3092**

**Rated up to 100,000 BTUs /  
Max temperature 125°F**


Fit the Automatic Grill Shut-Off Timer in the gas supply line before the grill. The timer accommodates 1/2" NPT piping (both ends).

**Important:** Ensure you connect the gas supply to the side marked "IN" on the timer (see photo). It **MUST NOT** be fitted within 18" of the grill, or it will overheat, causing damage to the timer and may result in a leak.

Use pipe joint compound on male fittings attached to the timer.

To use, set the dial (turn clockwise) to the desired time to shut off. The dial is marked in 3 twenty minute increments (any position in between is an estimate of that set time). The timer dial will auto rotate (counter-clockwise) and will shut off the gas supply when the dial reaches OFF (i.e. the time is completed).

**Important:** When using the timer for periods of less than twenty minutes, you must first set the dial to 20 minutes (to activate), then return (counter-clockwise) to the desired amount of time. This will ensure proper timer operation. See Fig. 1-1.

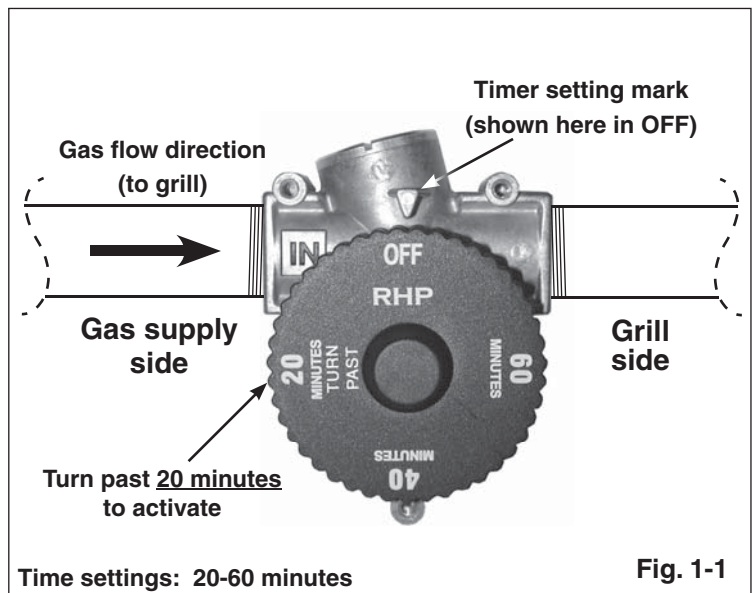

ROBERT H. PETERSON CO. • 14724 East Proctor Avenue • City of Industry, CA 91746

# AUTOMATIC GRILL SHUT-OFF 1-HOUR TIMER INSTRUCTIONS



**Model # 3092**

**Rated up to 100,000 BTUs /  
Max temperature 125°F**


Fit the Automatic Grill Shut-Off Timer in the gas supply line before the grill. The timer accommodates 1/2" NPT piping (both ends).

**Important:** Ensure you connect the gas supply to the side marked "IN" on the timer (see photo). It **MUST NOT** be fitted within 18" of the grill, or it will overheat, causing damage to the timer and may result in a leak.

Use pipe joint compound on male fittings attached to the timer.

To use, set the dial (turn clockwise) to the desired time to shut off. The dial is marked in 3 twenty minute increments (any position in between is an estimate of that set time). The timer dial will auto rotate (counter-clockwise) and will shut off the gas supply when the dial reaches OFF (i.e. the time is completed).

**Important:** When using the timer for periods of less than twenty minutes, you must first set the dial to 20 minutes (to activate), then return (counter-clockwise) to the desired amount of time. This will ensure proper timer operation. See Fig. 1-1.

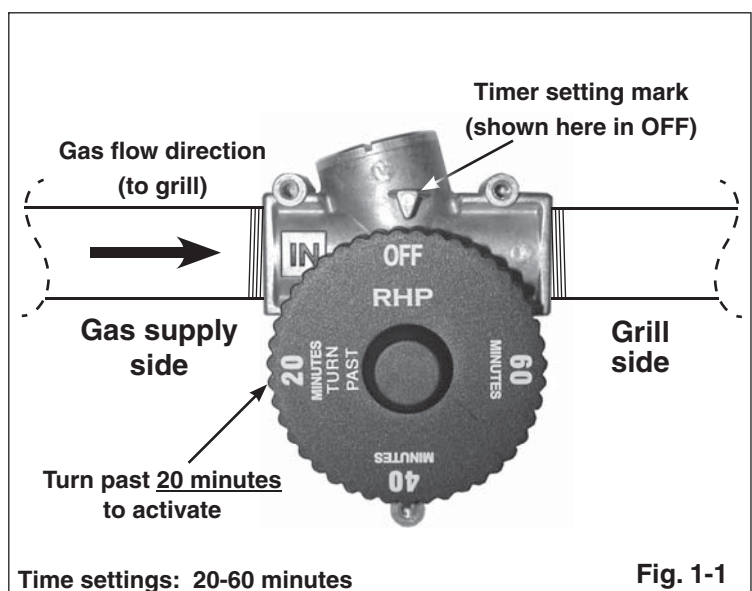

ROBERT H. PETERSON CO. • 14724 East Proctor Avenue • City of Industry, CA 91746