

## PAIRING THE WALL CONTROLL

1. With the fireplace ON press and hold the ON/OFF button for about 3 seconds until you hear the buzzer sound twice and the power indicators begin to flash. (power indicators located top right of viewing area)
2. Within 5 seconds on the wall control press the ON/OFF(power) button repeatedly until the buzzer sounds again and the indicators flash acknowledging that it has paired. You may also hear another buzzer and the pair is now completed.

-Pairing must be done within 5 seconds or the fireplace will time out of pairing mode.

-To clear any paired remotes from the unit locate then press and hold the reset button for 3 seconds. You should hear a buzzer letting you know the codes have been cleared so you can now pair a new remote or wall control. (The reset is located next to the manual controls and can be pressed with a paper clip.)

©2019

MODERN  FLAMES

[www.modernflames.com](http://www.modernflames.com)  
Please dispose of properly.



## Wireless Wall Mounted Touch Control

MF-PRO-WTC  
NEW PART # TH-WTC/LP



## Installing Optional Wall Mounted Touch Control

1. Locate 2-gang low voltage bracket within 20 feet of fireplace. Install according to manufacturer's instructions.
2. Remove glass face (attached with magnets) from metal bracket.
3. Attach the metal bracket to the low voltage bracket with the included screws.
4. Insert batteries (2 AAA) and replace the glass face.
5. Pair wall control to fireplace.



Power

This will cycle the machine on and off. Upon cycling power on, the machine will return to the settings it had when it was cycled off.



Reset

If the fireplace is on, this button will act as a reset and bring all colors back to the default Modern Flames orange/yellow.



Heat

This will cycle the heater between high, low and off.



Timer

This will allow you to use the Up or Down arrows to set a time (indicated by the display screen). Times will be ½h, 1h or 3h. Upon reaching this time the machine will power off .



Fade/Demo

All zones of the fireplace will cycle through various demo modes.- color gradients/fade, color jumps



Flame

This is a zone setting. Touching this button will allow you to change the color and brightness of the flame by using the RGB wheel and brightness slider.



Ember Bed

This is a zone setting that controls the color and brightness of the ember bed.



Downlight

This is a zone setting that controls the color and brightness of the downlight.



Sync

Pressing the sync button will change all the colors of the fireplace (Flame, Ember Bed and Downlight) to match the current color of the flame setting.



Arrows

Pressing the Up or Down arrows will start the thermostat setting. Set to the desired temperature and the unit will automatically confirm within a few seconds.