



M55C FS & FPI CAST - QUICK REFERENCE GUIDE

M55 Cast Control Panel Operation

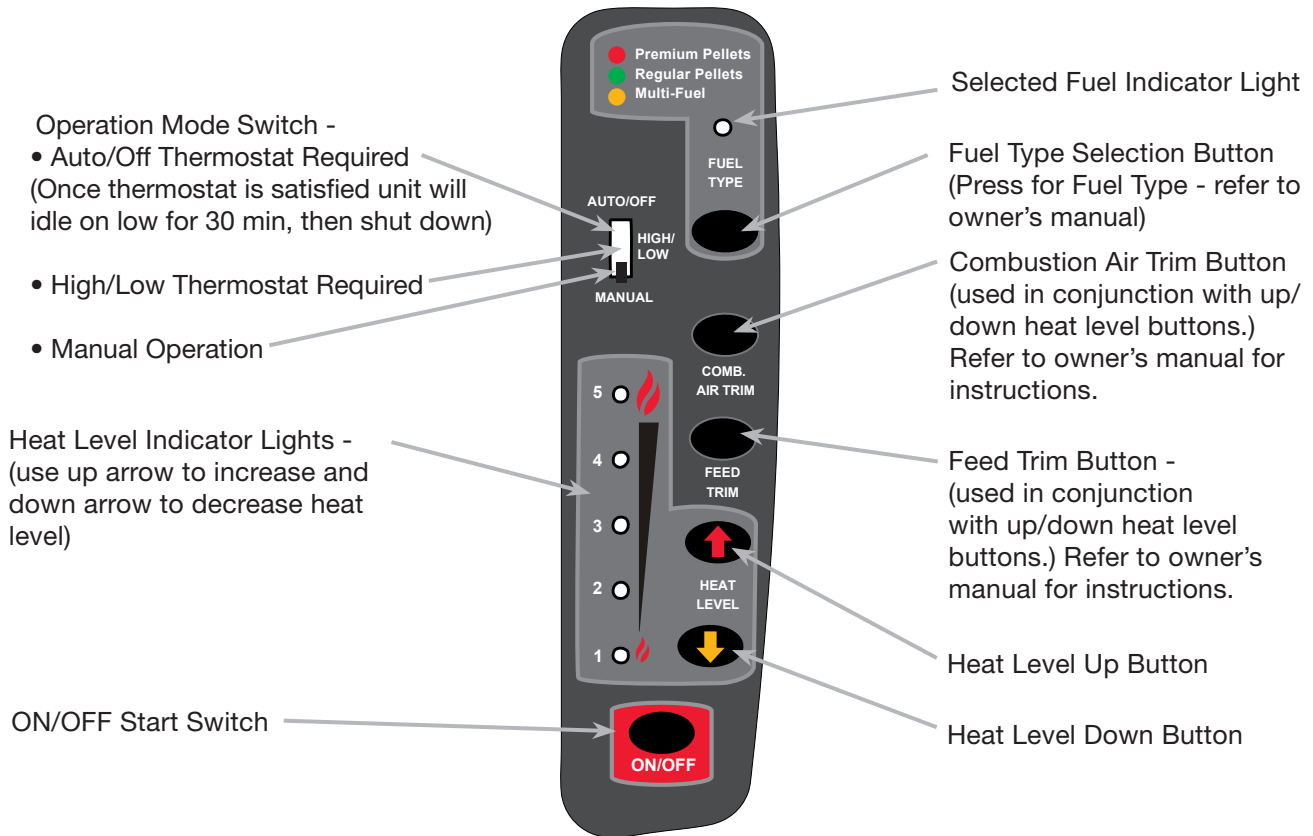


Error Flash Codes - *Troubleshooting Guide* for the M55C FS and FPI Cast

 (This is a reference only - please see Owner's Manual for full instructions.)



For a **flashing #2** Heat Level Light (indicates loss of vacuum) check the following -

 - Make sure the firebox door is latched and sealed.
- Make sure ash pan is closed and sealed.
- Make sure unit and venting is clear of fly ash.
- If #2 light continues to flash contact your dealer or your service technician.



For a **flashing #3** Heat Level Light (indicates exhaust temperature sensor is not at operating temperature) check the following -

- Make sure there are pellets in the hopper.
- Make sure burn pot liner is positioned correctly and clean.
- If #3 light continues to flash contact your dealer or your service technician.



For a **flashing #4** Heat Level Light (indicates that the high-limit sensor has tripped or the hopper lid sensor has failed to detect the lid magnet) check the following -

- Make sure hopper lid is closed.
- Make sure high-limit sensor has been reset (see below).
- If #4 light continues to flash contact your dealer or your service technician.

To Reset the High-Limit Sensor

(See Owner's Manual for details)

- 1 - Unplug unit
- 2 - Open hopper lid
- 2 - Remove access cover
- 3 - Push high-limit reset button (if tripped you should feel a click when resetting)
- 4 - If #4 light continues to flash contact your dealer or your service technician.

