


Split Oak (S) Log Placement Instructions (18" model)

S-18

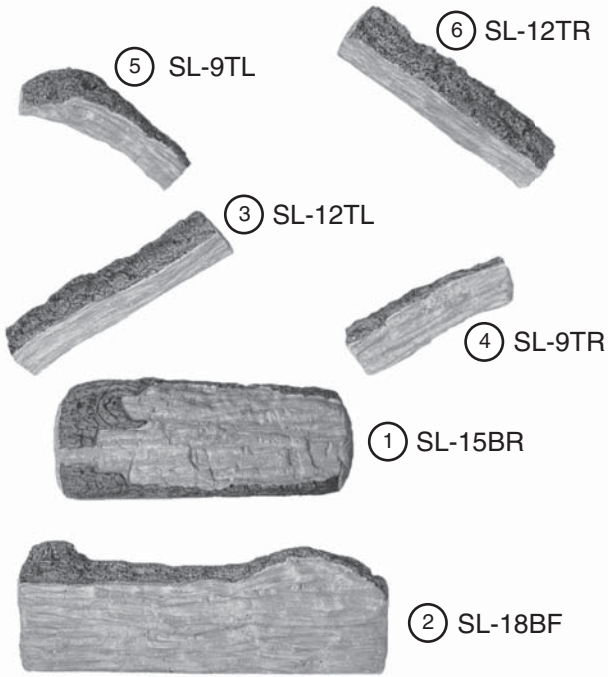

CAUTION: Burn hazard! Logs will remain hot for some time after use.



Fig. 1



Fig. 2

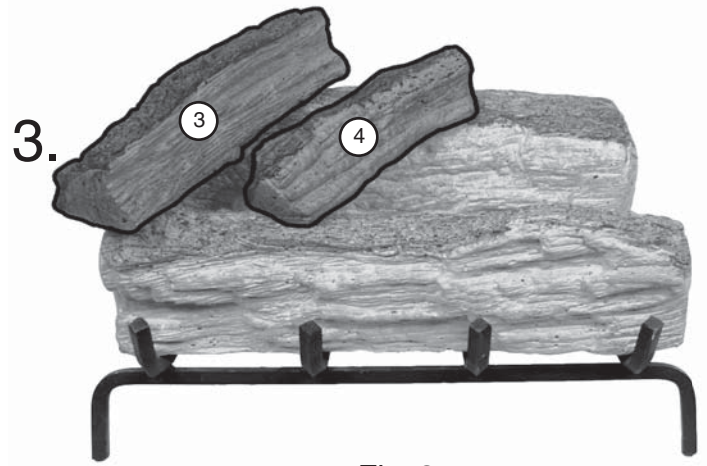


Fig. 3

Final Log Placement


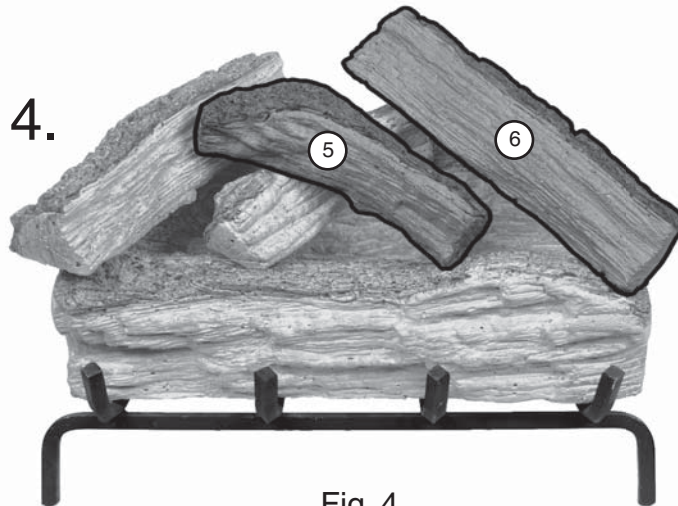


Fig. 4

Split Oak (S) Log Placement Instructions (20" model)

S-20

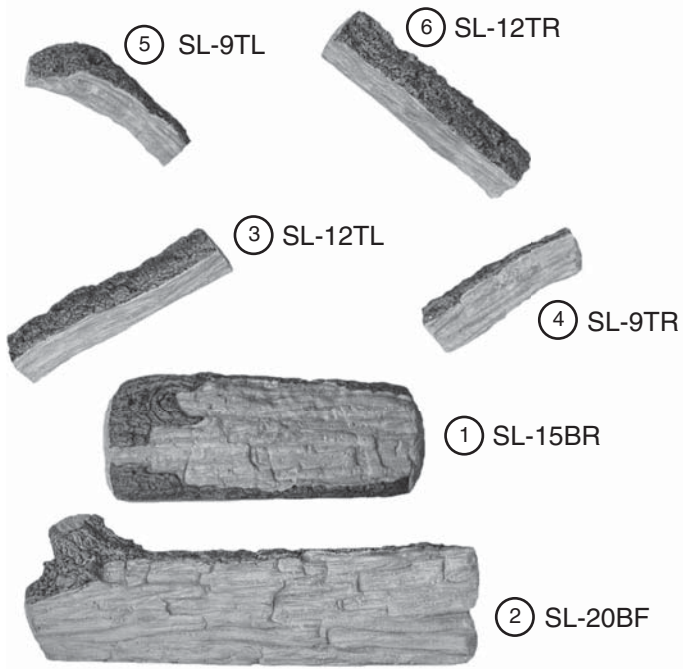

CAUTION: Burn hazard! Logs will remain hot for some time after use.

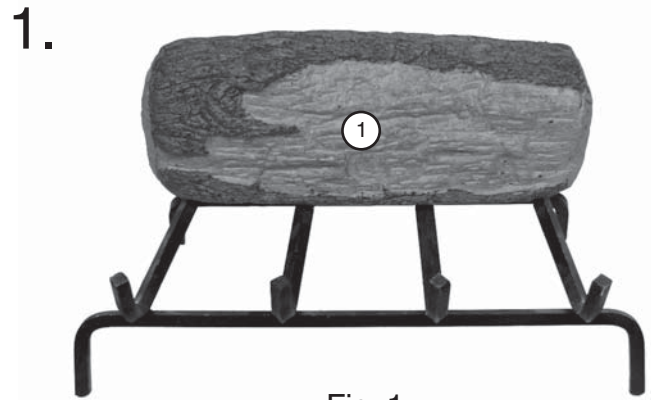


Fig. 1

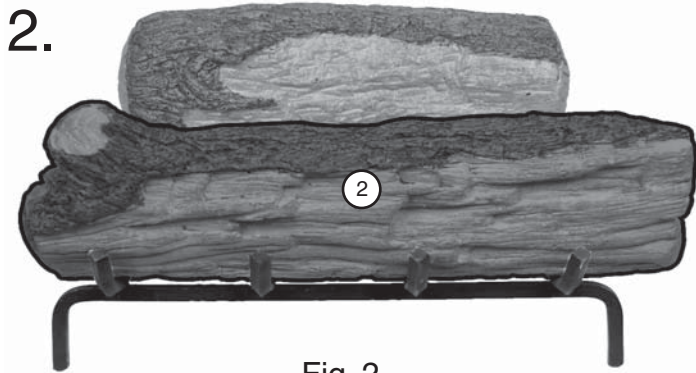


Fig. 2

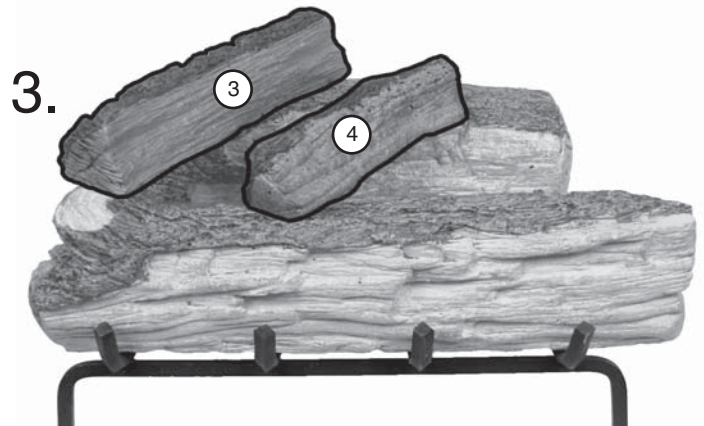


Fig. 3

Final Log Placement


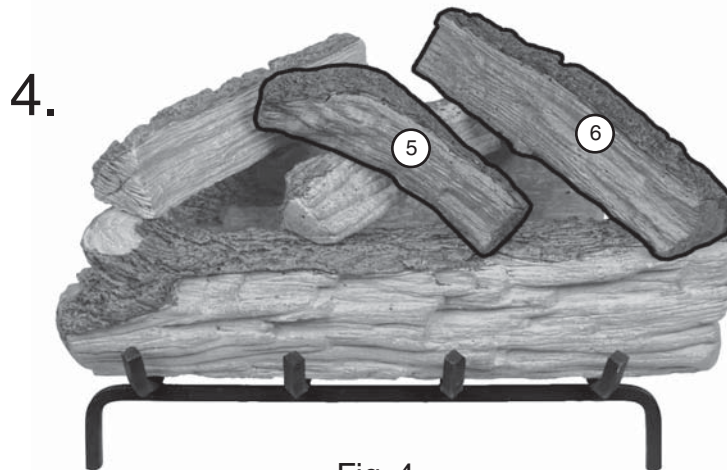


Fig. 4

Split Oak (S) Log Placement Instructions (24" model)

S-24

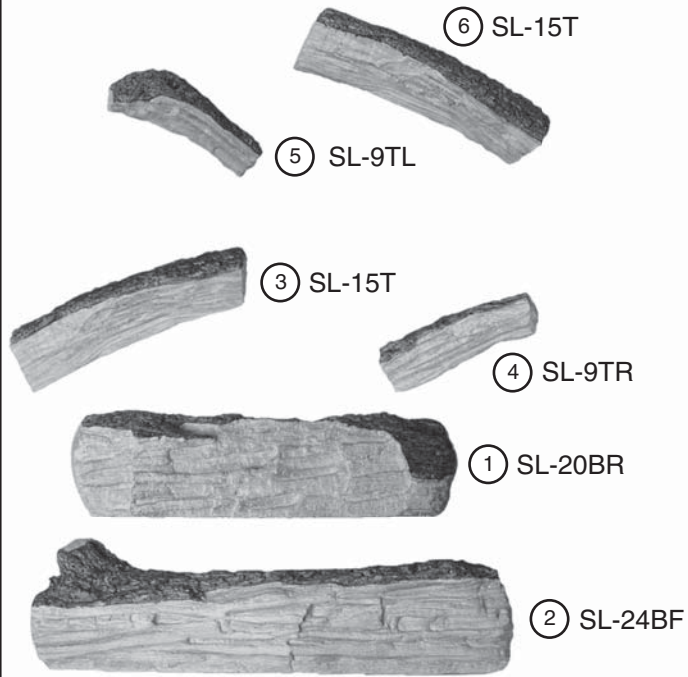

CAUTION: Burn hazard! Logs will remain hot for some time after use.

1.



Fig. 1

2.

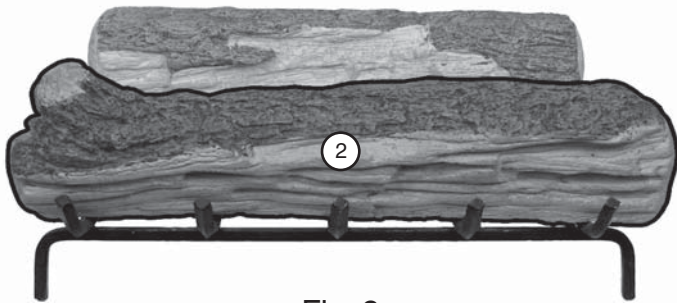


Fig. 2

3.

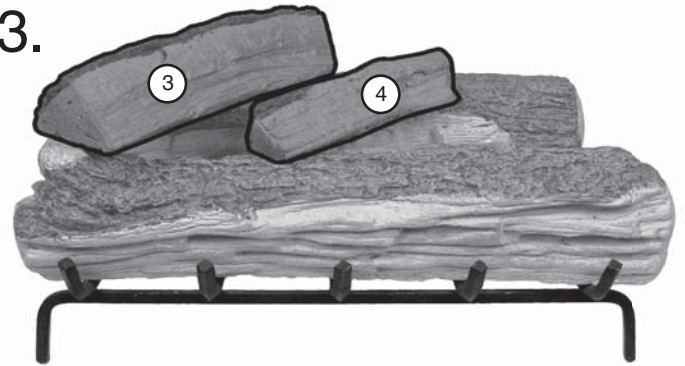


Fig. 3

Final Log Placement

4.


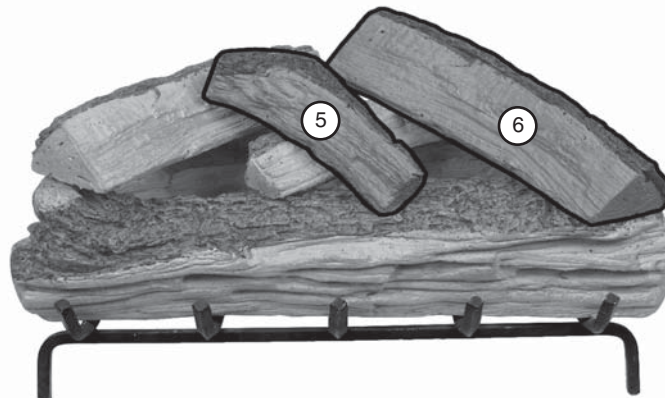


Fig. 4

Split Oak (S) Log Placement Instructions (30" model)

S-30

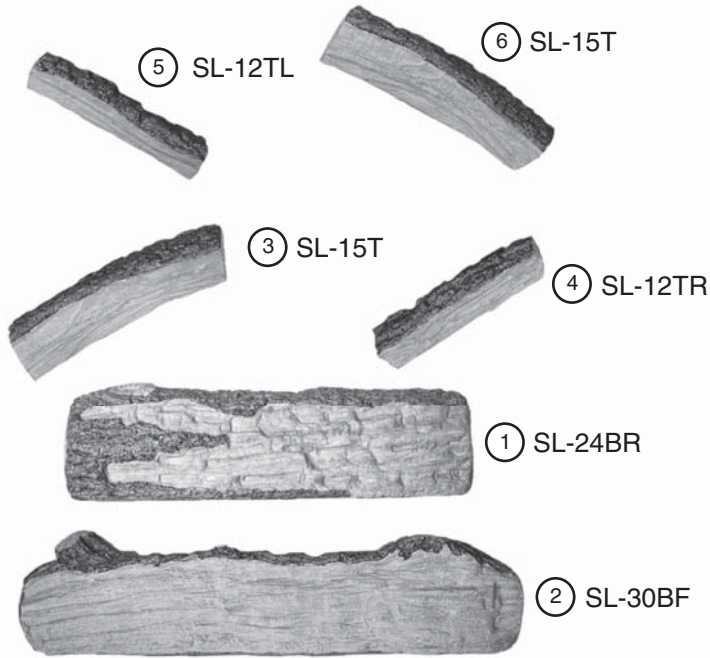

CAUTION: Burn hazard! Logs will remain hot for some time after use.

1.

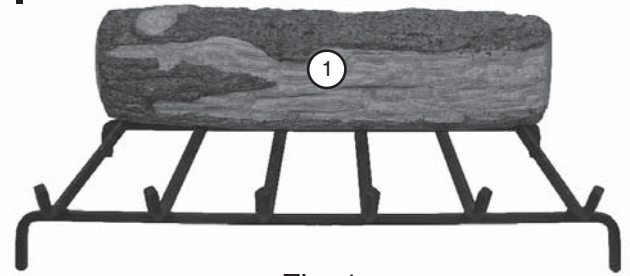


Fig. 1

2.

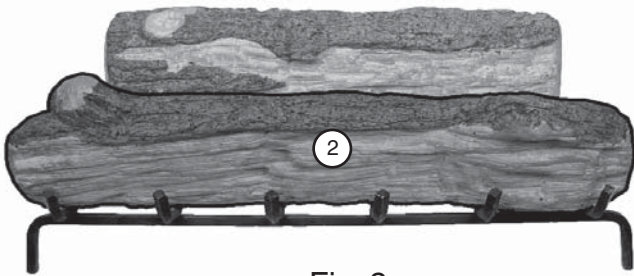


Fig. 2

3.

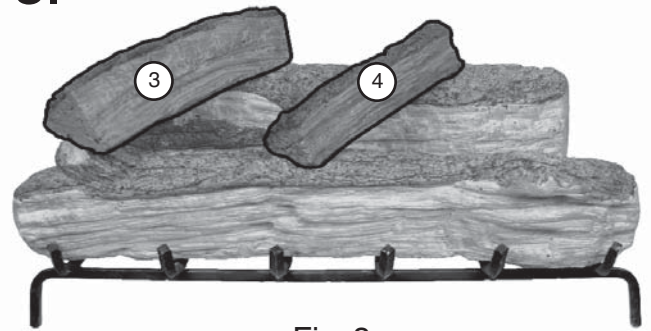


Fig. 3

Final Log Placement

4.

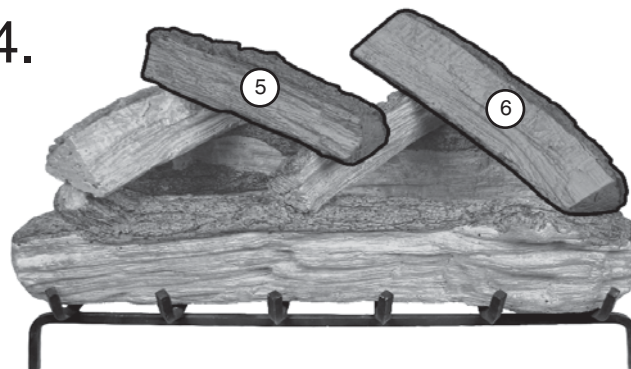


Fig. 4