


CEILING RECESS KIT (SOLD SEPARATELY)

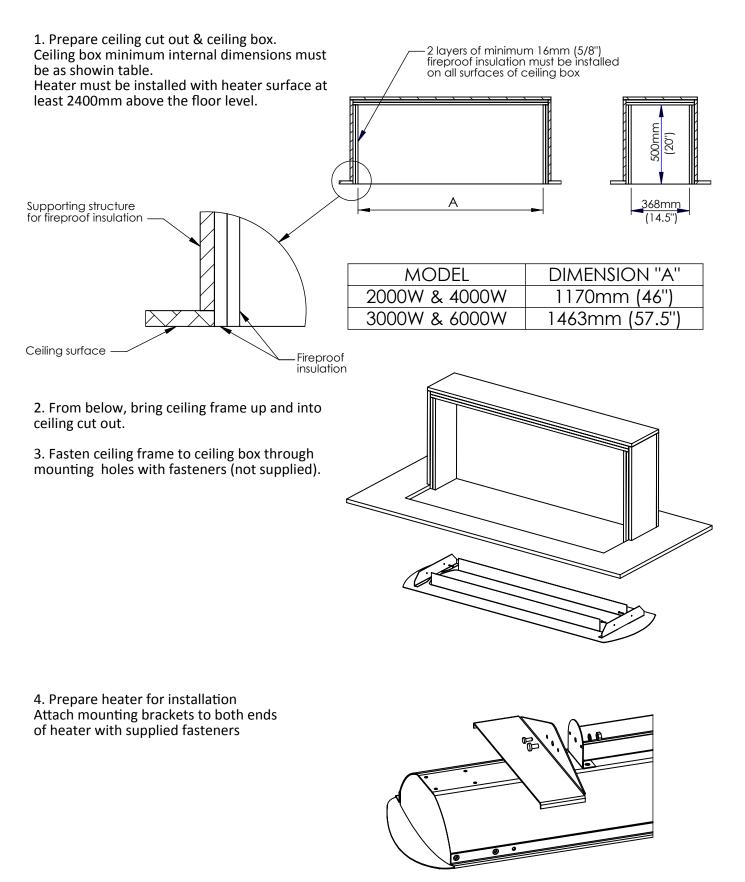


www.bromicheating.com

6. Assemble supplied terminal blocks, wire, conduit & junction box cover.

7. Raise one side of heater up into the ceiling box & then raise whole heater


into cavity.

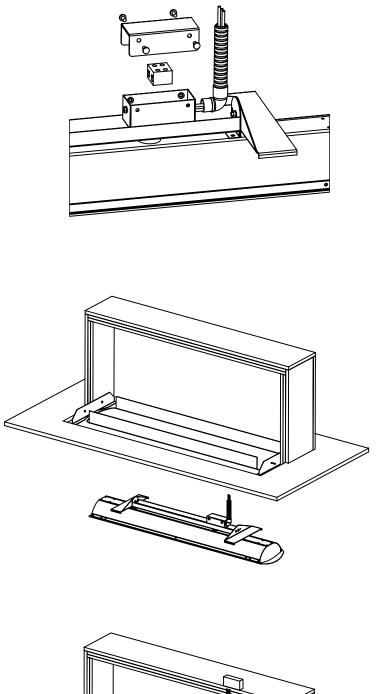

8. Rotate the heater into horizontal position in the ceiling box & then lower down onto the ceiling frame.

9. Ensure all four side mounting brackets are hooked over the ceiling frame & centre the heater inside the frame.

10. Make electrical connection from heater to power supply. Connection to be made outsideon the side or top of the ceiling box.

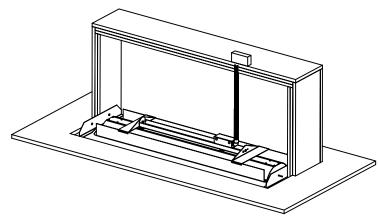

BROMIC HEATING

V1.0 Last Edited 07/01/2014

Head Office: 1 Suttor Street, Silverwater, Sydney, NSW 2128 Australia
Telephone: 1300 276 642 (within Australia) or +61 2 9748 3900 (from overseas)
Fax: +61 2 9748 4289
Email: info@bromicheating.com
Web: www.bromicheating.com

Note: Bromic Heating reserves the right to make changes to specifications, parts, components and equipment without prior notification. This Installation, operation and service manual may not be reproduced in any form with prior written consent from Bromic Heating.

www.bromicheating.com