
## **VRT3032 AND VCT3032**


## **VENT-FREE FIREPLACES**

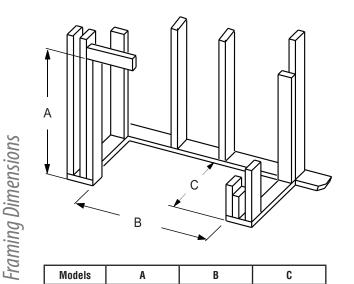



0" Clearance Permitted
F
_
<b>←</b>

Models	Α	В	C
32" Models	36-5/8"	34-1/2"	16-5/8"
	931 mm	877 mm	423 mm

Models	D	E	F
32" Models	34-1/2"	55-5/8"	39-3/8"
	876 mm	1413 mm	1000 mm

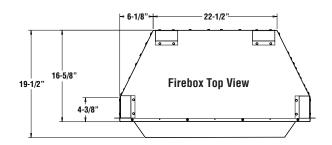

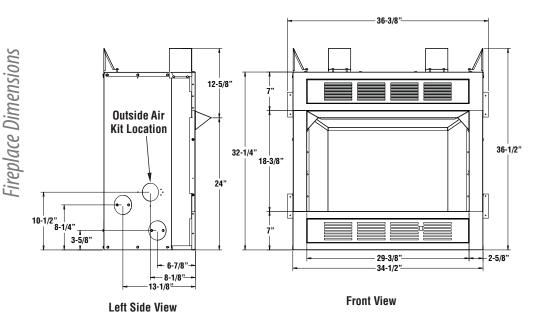

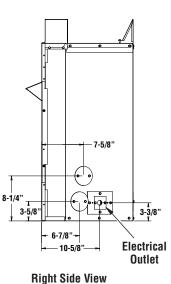

Diagrams, illustrations and photographs are not to scale. Consult installation instructions. Product designs, materials, dimensions, specifications, colors, and prices are subject to change or discontinuance without notice.

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

P/N 900660-00, REV. NC, 04/2016



Product Information

Cat. #	Model	Type	Interior	Weight	Cu. Ft.
F0302	VRT3032B	Radiant	Black	104 lb.	15.9
F0303	VCT3032B	Louver	Black	104 lb.	15.9
F0308	VRT3032WS	Radiant	WS Refractory	104 lb.	15.9
F0309	VCT3032WS	Louver	WS Refractory	104 lb.	15.9


isting Informati




Report No. F12-020

These appliances comply with National Safety Standards and are listed by PFS Corporation to ANSI 221.91 Ventless Firebox Enclosures for Gas-Fired Unvented Decorative Room Heaters and is approved for use with appliances listed to ANSI Z21.11.2 decorative type unvented room heaters.

## **Mantel Clearance**

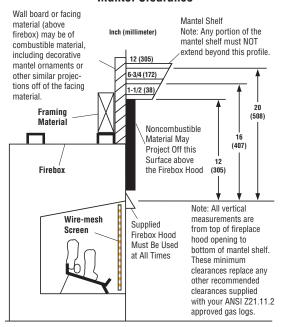


Mantel from Top of Opening	$\rightarrow$	Mantel Depth Allowed
12" (305 mm)	$\rightarrow$	1-1/2" (38 mm) max.
16" (407 mm)	$\rightarrow$	6-3/4" (172 mm) max.
20" (508 mm)	<b>→</b>	12" (305 mm) max.

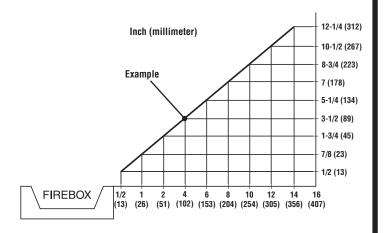


## **Minimum Wall and Ceiling Clearances**

- A. Clearances from the side of the fireplace cabinet to any combustible material and wall should follow diagram shown here.
  - Example: The face of a mantel, bookshelf, etc. is made of combustible material and protrudes 3-1/2" from the wall. This combustible material must be 4" from the side of the fireplace cabinet.
- B. Clearances from the top of the firebox opening to the ceiling should not be less than 42".
- C. When the firebox is installed directly on carpeting, vinyl tile or other combustible material, other than wood flooring, the firebox should be installed on a metal or wood panel extending the full width and depth of the enclosure.
- D. Clearances from the bottom of firebox to the floor is 0".

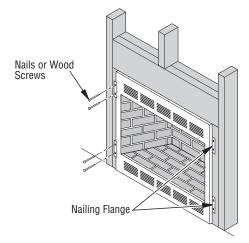

Typical Locations

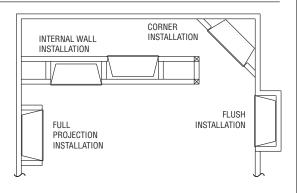

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Specifications and clearances are subject to change without notice. Refer to Installation and Operation Manual before installation of these appliances for updated dimensions and instructions.

